


# CANON REFILL INSTRUCTIONS

*For PG-40, PG-510, PG-640, PG-645, CL-41, CL-511, CL-641, CL-646 cartridges*

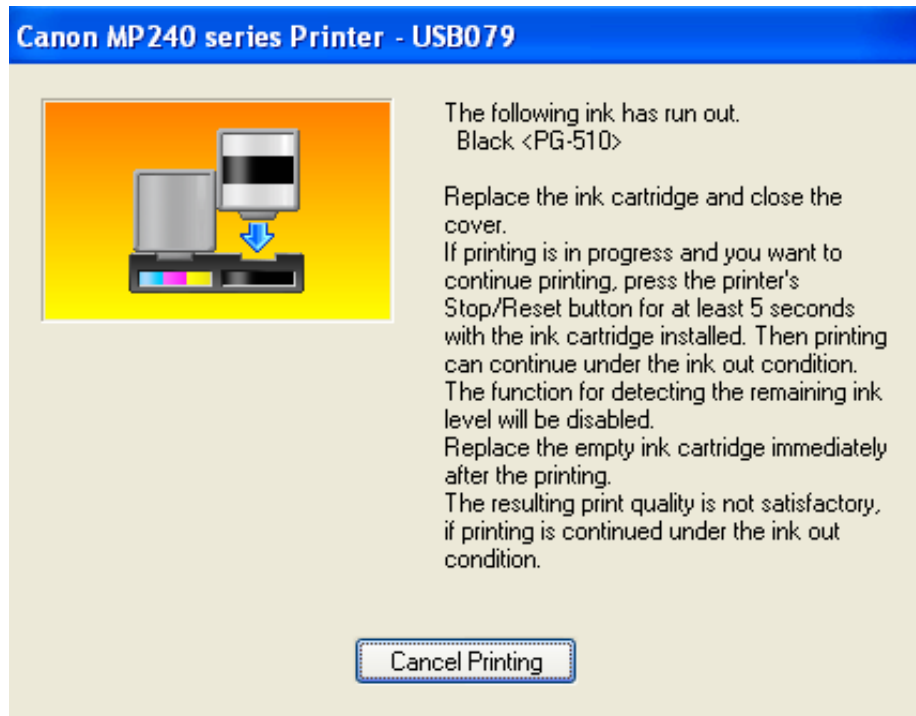

When the Canon cartridge is empty, the above warning appears on the screen of your computer

**Because the printer remembers the last empty status of your cartridge, this message will continue to be shown until you complete the following steps.**

- Replace the ink cartridge and close the cover.
- Press the "Stop/Reset" button for 5 seconds.

This enables the printer to continue printing without using the ink level indicator.

When your printing becomes faded, it's time to refill the cartridge again.

Any problems, call Ink Citi QLD on 0416 988 894 for assistance.

Happy Printing!